


artafon RG 02 & RG02F

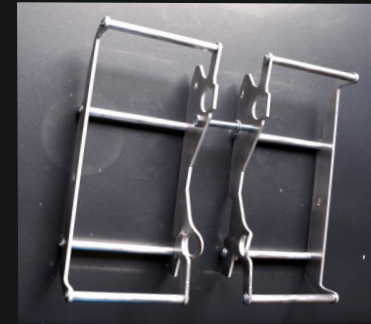

**Radiator guards installation instructions**  
for motorcycles KTM Husqvarna 2017,2018  
4T 2T TPI EXC TE FE XCW XC



[WWW.ARTAFON.COM](http://WWW.ARTAFON.COM)

Set contains:

8 spacing bars:

3 long and 1 short - on the left side.

3 long and 1 short - on the right side.

14 hat- screws M6 x 14mm for mounting spacing bars.

2 regular screws M6 x 14mm for mounting spacing bars.

M8 Screw + 2 washers + self-locking nut - to  
attach the inner brackets to the frame.

2 inner brackets - right and left

2 external brackets -  
right and left




## Before installation:

- 01) Remove seat.
- 02) Remove plastic side covers.
- 03) Remove plastic radiator guards.
- 04) Remove cooling liquid.
- 05) Remove radiators.
- 06) Move the overflow pipe at the back of the thermostat (depending on the model).
- 07) Set all the wires to get enough free space on the side of the frame.

## Start installation:

01) Screw (using hat- screws M6 x 14mm) the spacer bars for inner brackets:

3 upper long and 1 lower short on the left side and the same on the right side.

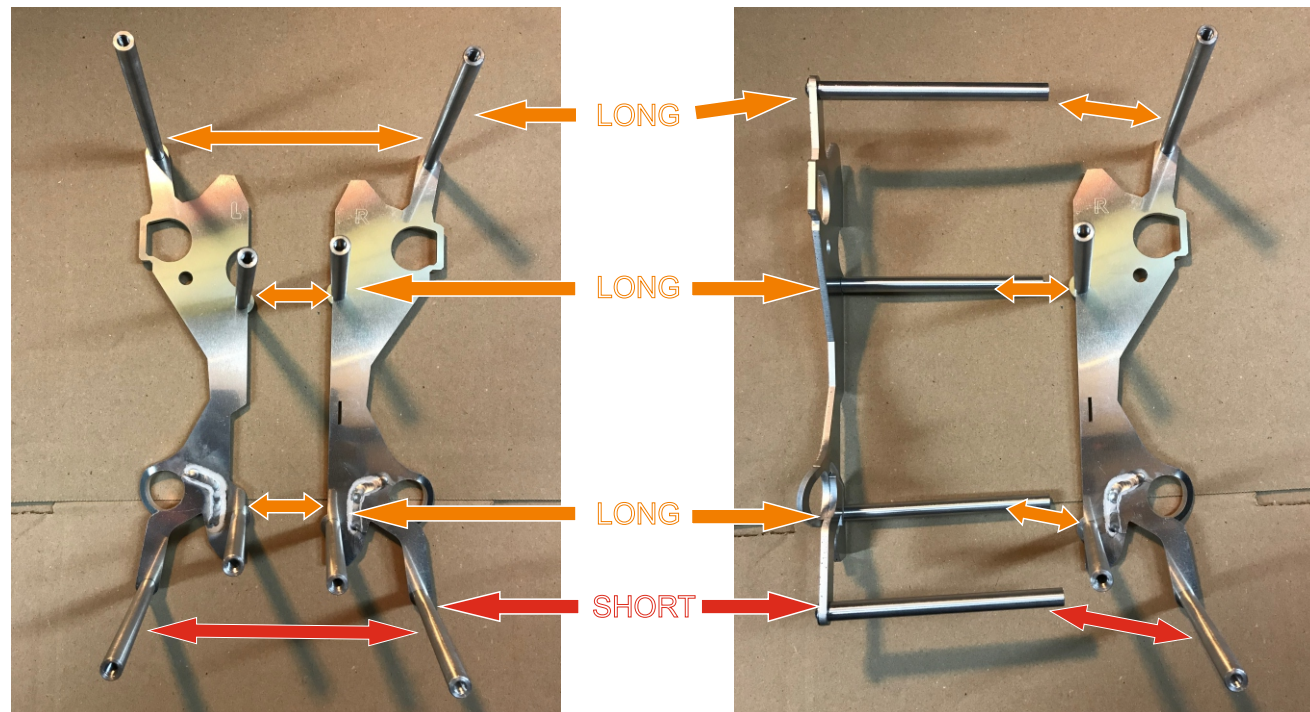


Install the left inner brackets marked with the letter "L".

Put the washer on the bolt between the bracket and frame!






Put the second washer on the bolt between the bracket and frame!

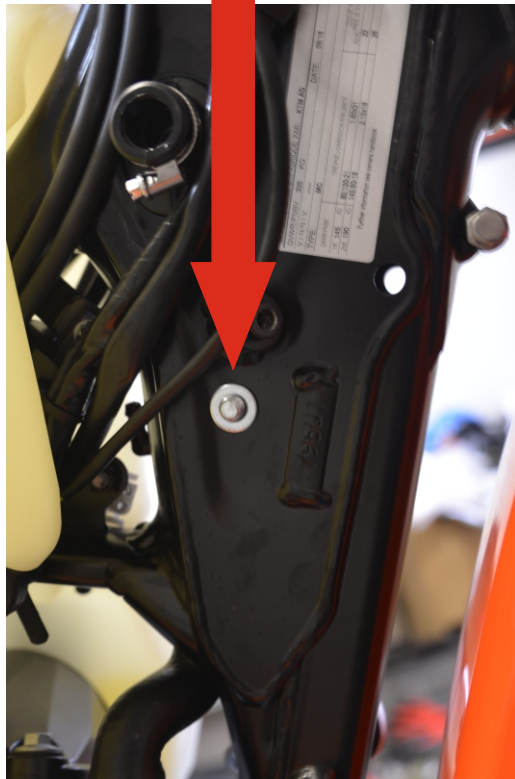

Install the right inner brackets marked with the letter "R".



Wind up the nut.

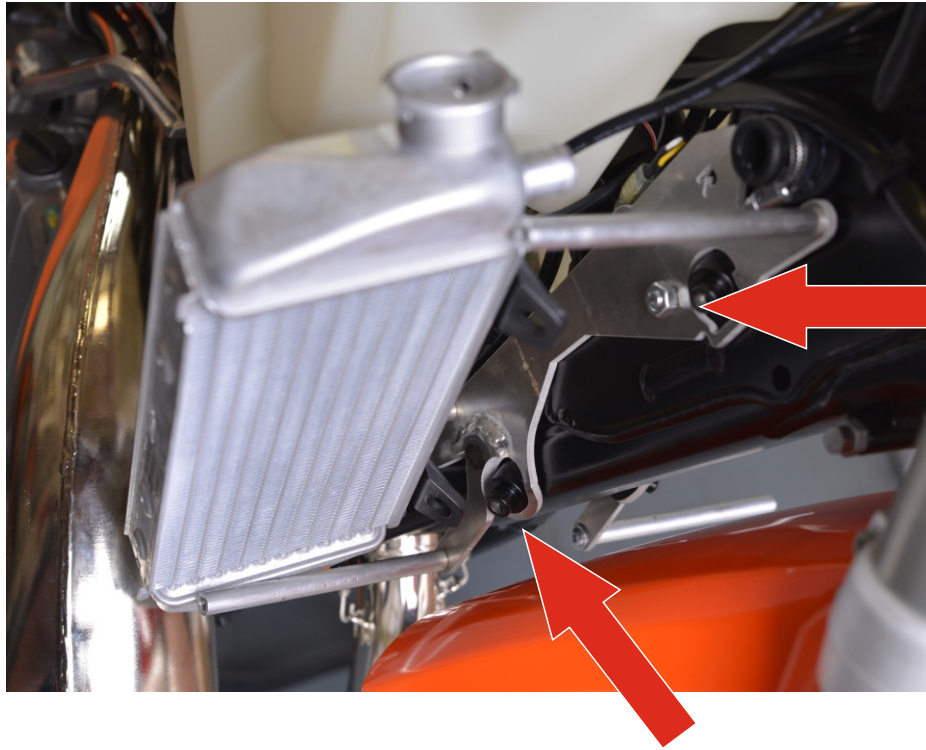

02) Tighten the nut.


01) Push the lower part of the bracket toward the back of the motorcycle to lean on tenon mounting guards and check does bracket surface adjoins to the frame.

Install the right and left radiator.

Screw the external bracket.

regular screw  
M6 x 14mm

hat- screws  
M6 x 14mm

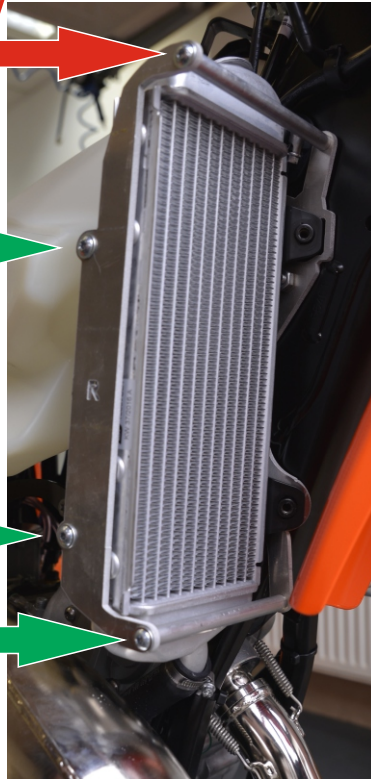

regular screw  
M6 x 14mm

hat- screws  
M6 x 14mm





- 1) Install plastic radiator guards.
- 2) Fill cooling liquid.
- 3) Install plastic side covers.
- 4) Install seat.